

picocom

Минимальный эмулятор терминала



Установка

```
apt install picocom
```

Примеры запуска

```
picocom -b 115200 -f h /dev/ttyS0
```

Сочетания клавиш

Префикс: **Ctrl+A**

Ctrl+X	Exit picocom
Ctrl+Q	Exit without reseting serial port
Ctrl+B	Set baudrate
Ctrl+U	Increase baudrate (baud-up)
Ctrl+D	Decrease baudrate (baud-down)
Ctrl+I	Change number of databits
Ctrl+J	Change number of stopbits
Ctrl+F	Change flow-control mode
Ctrl+Y	Change parity mode
Ctrl+P	Pulse DTR
Ctrl+T	Toggle DTR
Ctrl+G	Toggle RTS
Ctrl+K	Send break
Ctrl+C	Toggle local echo
Ctrl+W	Write hex
Ctrl+S	Send file
Ctrl+R	Receive file
Ctrl+V	Show port settings
Ctrl+H	Show this message

Ссылки

[picocom\(1\) — Arch manual pages](#)

<https://sysadminmosaic.ru/picocom/picocom>

2022-10-17 22:04

